



Figure 7. Wall blocks installed

- (10) Using $1\frac{1}{4}$ " exterior grade screws, fasten the wall blocks in place. This is done with the wall laying horizontally by screwing one side and then flipping the wall over and doing the other side.
- (11) Insulate wall with fiber insulation.

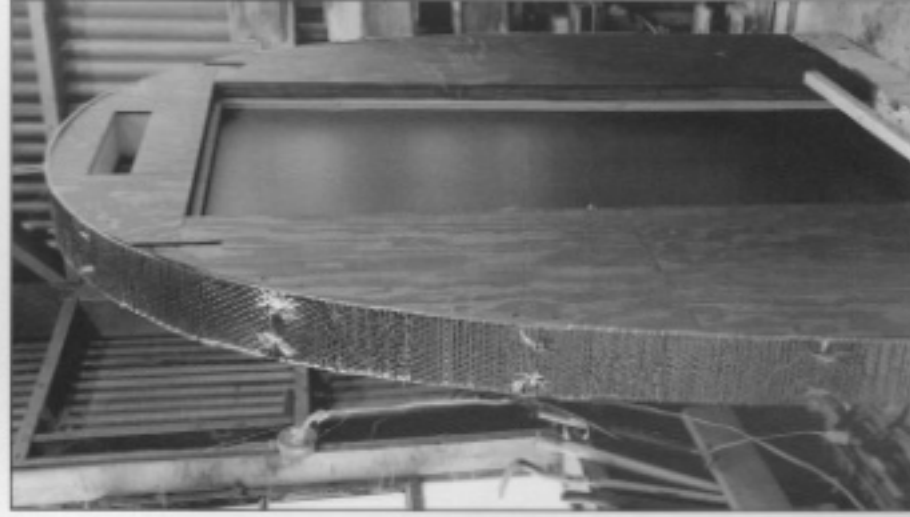


Figure 8. Wall-end material

- (12) Staple a strip of wall-end material to the wall blocks to cover the wall edge (fig. 8).
- (13) Cut your trim pieces (fig. 9) on a chop saw.
- (14) Apply an all-in-one stain (we use the same cedar tone that we apply to the decks) to the trim pieces and let dry.

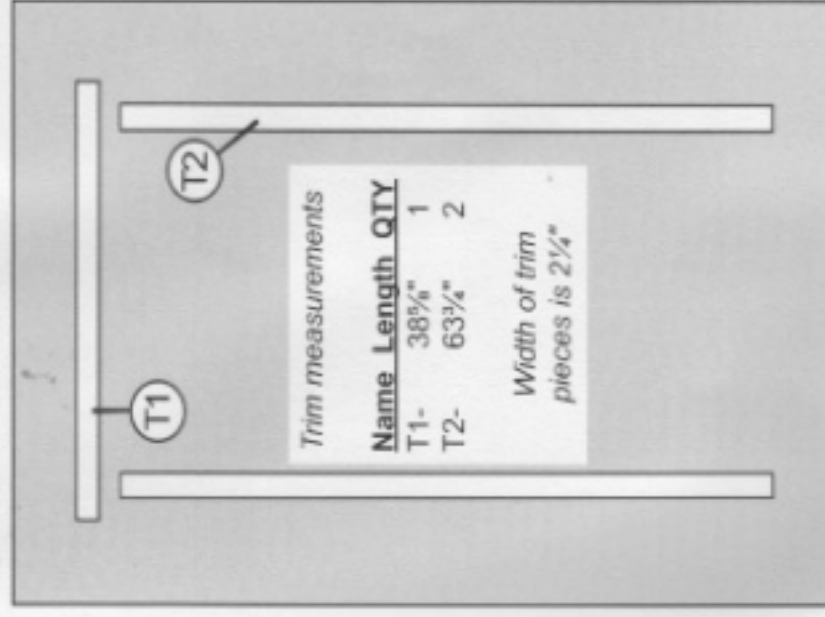


Figure 9. Door trim measurements