

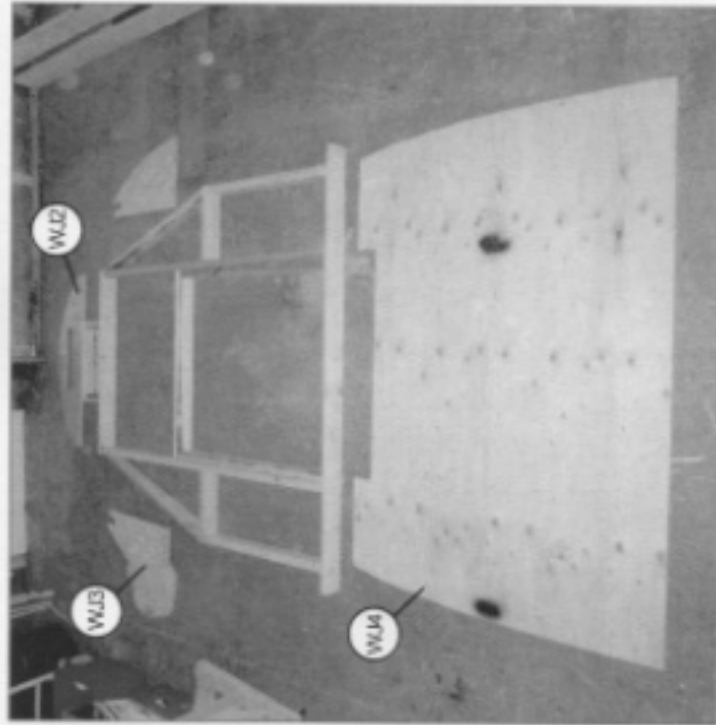


Figure 2. Back wall frame with pre-cut exterior wall panels WJ2, WJ3, and WJ4

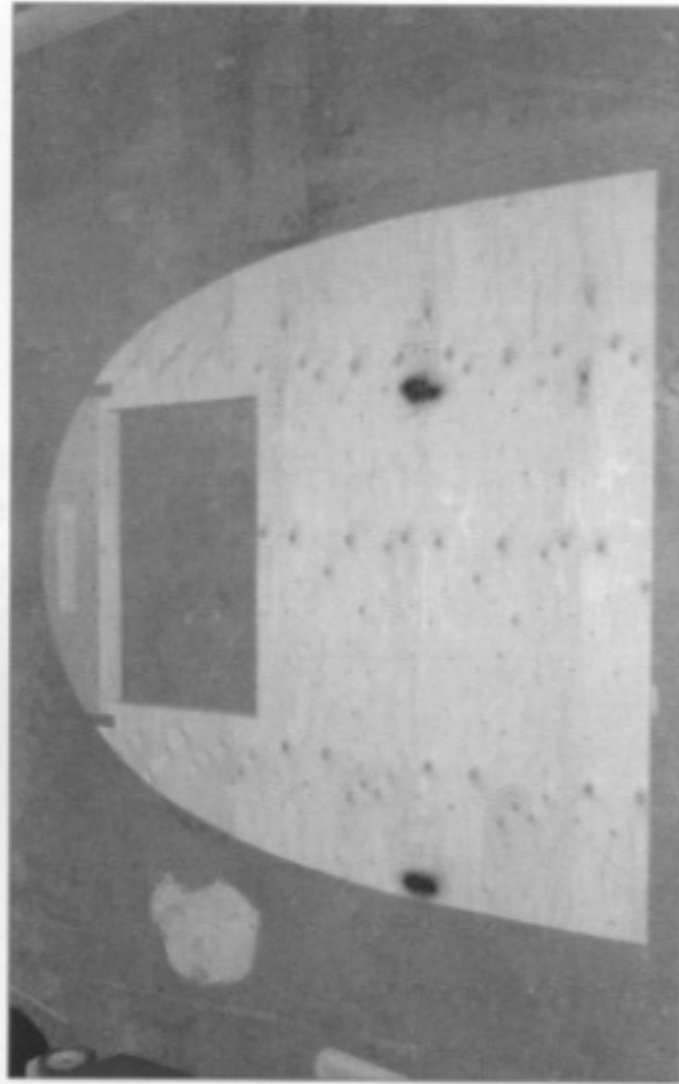


Figure 3. Back wall with attached exterior wall panels. Notice that the back wall does **NOT** have the notches cut from the corners.

ORDER OF CONSTRUCTING THE BACK WALL:

- (1) Cut the framing pieces on a miter saw using the measurements on the previous page (**fig. 1**).
- (2) Fasten the pieces together using 3" exterior deck screws or a nail gun.
- (3) Cut out the interior and exterior wall paneling (WJ2, WJ3 and WJ4 in **fig. 2**) using a jigsaw and the pattern dimensions on pages 59-60.
- (4) Repeat steps 4 through 12 from the front wall construction steps **EXCEPT** the instructions regarding cutting the notches (**fig. 3**).
- (5) Cut your trim pieces on a chop saw and table saw using the measurements in **Figure 4**.
- (6) Sand the trim and apply an all-in-one stain to the trim pieces and let dry.